

The logo for ANANDA, featuring the word "ANANDA" in a bold, italicized, green sans-serif font.

Help Manual

Check Brake Sensor

The content of this information is subject to change without notice

1. Check whether the brake lever and midmotor connector are plugged in properly, and replace the damaged part.
2. Check whether the brake lever wire is damaged or crushed, and replace the damaged wire of the brake lever.
3. Replace the brake lever.
4. If the above items are in good conditions, replace the midmotor.