

ANANDA

Help Manual

Throttle Signal

The content of this information is subject to change without notice

1. Check whether the throttle and midmotor connector are plugged in properly, and replace the damaged part.
2. Check whether the throttle harness is damaged or crushed, and replace the damaged harness of the throttle.
3. Replace the throttle.
4. If the above items are in good conditions, replace the midmotor.