



Help Manual

Controller Temperature

The content of this information is subject to change without notice

1. In case of any fault during operation under heavy load condition, stop running and cool down the midmotor before normal condition.
2. Please replace the midmotor.