


## Help Manual Motor hall

The content of this information is subject to change without notice

June 26<sup>th</sup>. 2022 V1.0

1. Check whether the motor harness and the controller connector are plugged in properly.

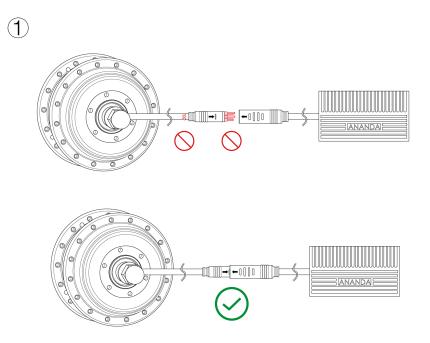

- 2. Replace the controller.
- 3. If the above items are in good conditions, replace the hubmotor.

2