

***ANANDA***

# Help Manual

## Motor phase current

The content of this information is subject to change without notice

1. Replace the midmotor.